
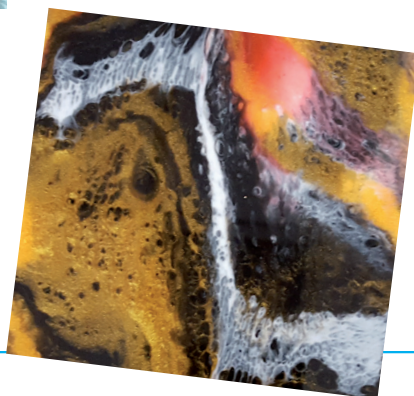
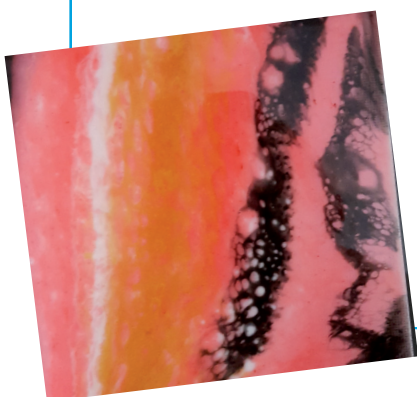


ART RESIN

- Prepare area and elevate your board from the table using blocks. Using a spirit level, make sure board is level.
- With gloves on, pour equal amounts of resin and hardener into a mixing cup. Stir really well for at least 3 minutes. Scrape the sides and the bottom to make sure you're being thorough (unmixed material will leave you with sticky spots that just won't cure). Once you put the resin and hardener together, you'll have about 45 minutes of working time before the resin thickens and cures.
- Pour mixed resin into a number of plastic cups ready to colour. Suggested products - Colourcraft Artist Inks and Lustre Powders. Experiment with adding small amounts of colour on a popstick, into the resin and stir well.
- Pour coloured resins on the surface making sure not to go to the edge. As you pour more resin on, it will flow to the edge of your board. Allow the resin to flow off the edge to cover the sides. At this time you can use a variety of techniques to produce great results.
 1. Inks can be dropped directly onto all areas.
 2. Using a popstick, drag the resin.
 3. Skewers can be used to draw fine lines
 4. Marbling comb can create a marbled effect.
 5. Use a straw and blow the resin to move the colours around.
 6. Tip the board and let the resin flow.
- Once you have finished, run the blow torch over the surface to release the bubbles and smooth out the resin.
- ArtResin® needs to sit for several hours in a dust-free space while it cures. In about 8 hours it will be tacky but you will be able to pour a second coat if necessary. In about 12 hours it will be dry to the touch, and within 24 hours it will be 95% cured. It will be fully cured within 72 hours.

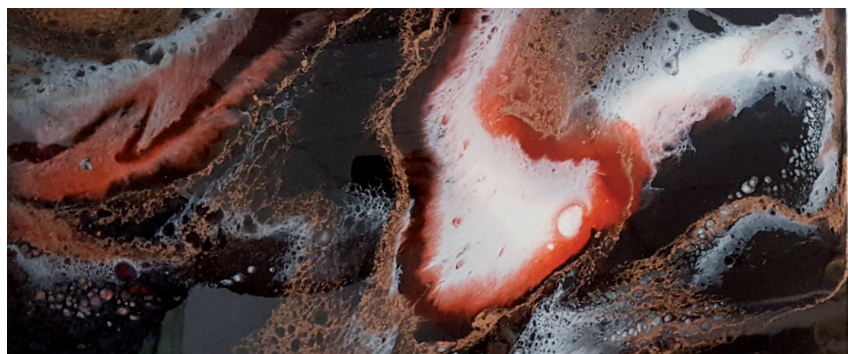

S&S
Creativity unlimited

Ph: 1300 731 529
orders@sswholesale.com.au
www.creativityunlimited.com.au